

# LFP0450-A5NMC

LFP Cubic

**LEVEL SENSORS** 





# Ordering information

Туре	Part no.
LFP0450-A5NMC	1063801

Other models and accessories → www.sick.com/LFP\_Cubic

Illustration may differ



# Detailed technical data

## **Features**

Medium	Fluids
Measurement	Switch, Continuous
Design	Standard
Probe type	Rod probe
Probe length	450 mm
Process pressure	-1 bar 10 bar
Process temperature	-20 °C +100 °C
RoHS certificate	<b>✓</b>
IO-Link	<b>✓</b>
cULus certificate	<b>√</b>

## Performance

Accuracy of sensor element	± 5 mm <sup>1)</sup>
Reproducibility	≤ 2 mm
Resolution	< 2 mm
Response time	< 400 ms
Dielectricity constant	≥ 5 for rod probe / cable probe ≥ 1.8 with coaxial tube
Conductivity	No limitation
Maximum level change	≤ 500 mm/s
Deactivated area at process connection	25 mm <sup>2)</sup>

 $<sup>^{1)}</sup>$  With water under reference conditions.

<sup>2)</sup> With parameterized container with water under reference conditions, otherwise 40 mm.

Deactivated area at end of probe	≥ 10 mm <sup>1)</sup>
MTTF	194.3 years (EN ISO 13849-1)
Display	1

 $<sup>^{1)}</sup>$  With water under reference conditions.

# **Electronics**

Supply voltage	12 V DC 30 V DC <sup>1)</sup>
Power consumption	≤ 100 mA at 24 V DC without output load
Initialization time	≤5s
Protection class	III
Connection type	M12 round connector x 1, 8-pin
Output signal	1 x PNP + 3 x PNP/NPN + 4 mA 20 mA / 0 V 10 V
Output load	4 mA 20 mA < 500 Ohm at Uv > 15 V, 4 mA 20 mA < 350 Ohm at Uv > 12 V, 0 V 10 V > 750 Ohm at Uv 14 $\geq$ V
Hysteresis	Min. 2 mm, free adjustable
Output current	< 100 mA
Inductive load	<1H
Capacitive load	100 nF
Enclosure rating	IP67: EN 60529
Temperature drift	< 0.1 mm/K
Lower signal level	3.8 mA 4 mA
Upper signal level	20 mA 20.5 mA
EMC	EN 61326-2-3, 2014/30/EU

 $<sup>^{1)}</sup>$  All connections are polarity protected. All outputs are overload and short-circuit protected.

## Mechanics

Wetted parts	1.4404, PTFE FKM
Process connection	G ¾ A
Housing material	Plastic PBT
Max. probe load	≤ 6 Nm

# Ambient data

Ambient operating temperature	-20 °C +60 °C
Ambient temperature, storage	-40 °C +80 °C

# Classifications


ECLASS 5.0	27200513
ECLASS 5.1.4	27200513
ECLASS 6.0	27200513
ECLASS 6.2	27200513
ECLASS 7.0	27200513
ECLASS 8.0	27200513
ECLASS 8.1	27200513

 $<sup>^{2)}\,\</sup>mbox{With parameterized container with water under reference conditions, otherwise 40 mm.$ 

ECLASS 9.0	27200513
ECLASS 10.0	27200513
ECLASS 11.0	27200513
ECLASS 12.0	27200513
ETIM 5.0	EC001447
ETIM 6.0	EC001447
ETIM 7.0	EC001447
ETIM 8.0	EC001447
UNSPSC 16.0901	41113710

# Type code

# Type code

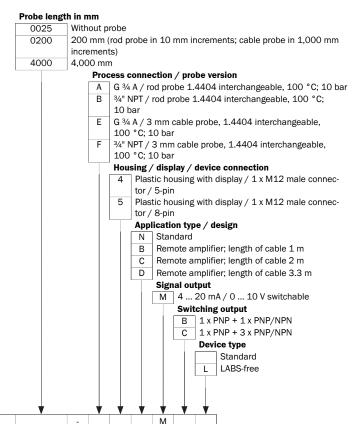

Not all variants of the type code can be combined!


Dependence between length of coaxial cable and probe length

Length of coaxial cable (mm)	Max. probe length (mm) foam mode deactivated	Max. probe length (mm) foam mode active
1000	4,000	2000
2000	3,000	1500
3300	1,000	500

LFP


# Dimensional drawing (Dimensions in mm (inch))

## Dimensional drawing: rod probe

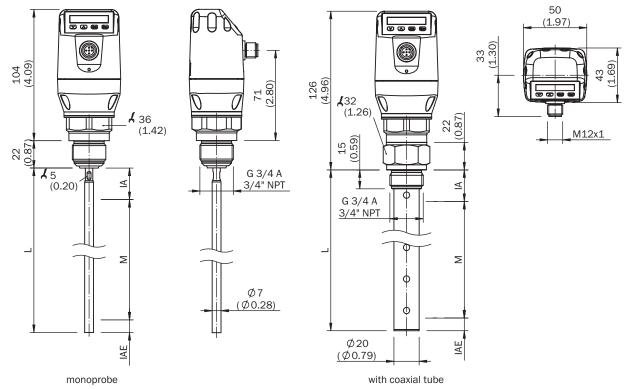


- ① M: measuring range
- ② L: Probe length
- ③ IA: Inactive area at process connection 25 mm (0.98")
- 4 IAE: Inactive area at probe end 10 mm (0.39")

# Connection type

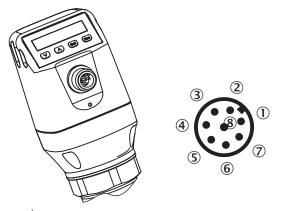


- ① L<sup>+</sup>: Supply voltage
- ② Q<sub>2</sub>: Switching output 2, PNP/NPN
- ③ M: Ground, reference ground for current-/voltage output
- 4 C/Q<sub>1</sub>: Switching output 1, PNP/IO-Link-communication
- ⑤ Q<sub>3</sub>: Switching output 3, PNP/NPN
- Q<sub>4</sub>: Switching output 4, PNP/NPN
- $\ensuremath{ \bigcirc }$  Q<sub>A</sub>: Analog current-/voltage output
- 8 No function


## Instruction for installation

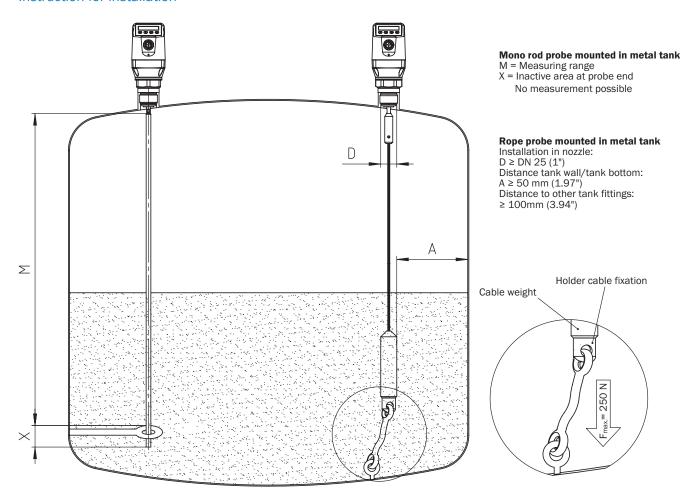

Installation in a metal immersion tube or metal bypass

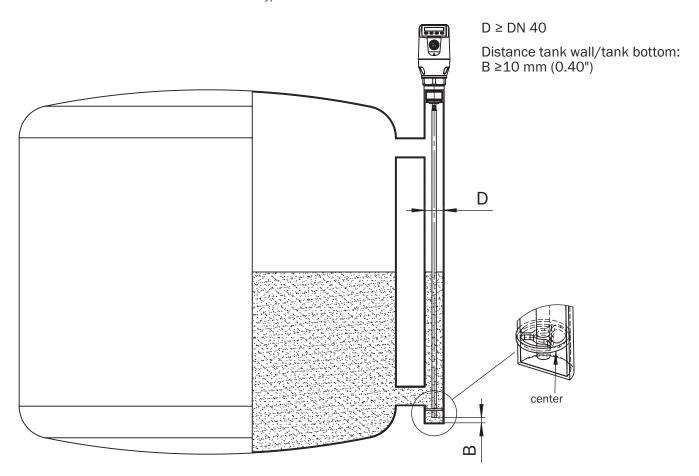

#### Installation in a metal tank

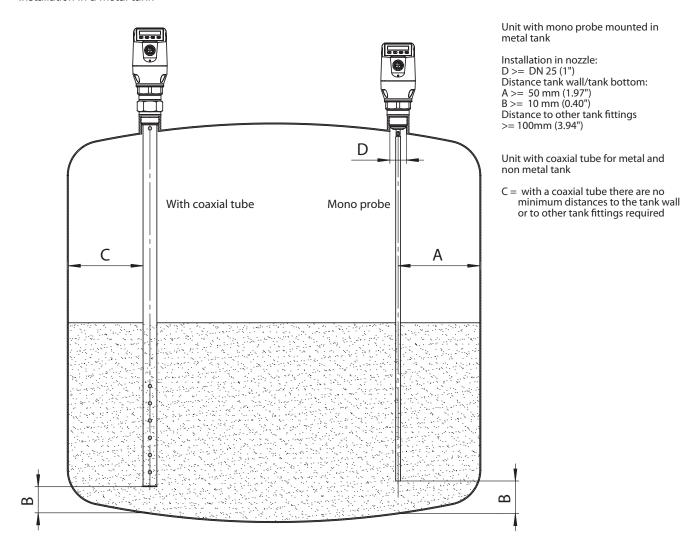

## Recommended accessories

Other models and accessories → www.sick.com/LFP\_Cubic

	Brief description	Туре	Part no.		
Spare parts					
	Spare probe for LFP Cubic, probe length 1000 mm, material 1.4404/316L, diameter 7 mm	BEF-ER- SN1000-LFPC	2065700		
	Spare probe for LFP Cubic, probe length 2000 mm, material 1.4404/316L, diameter 7 mm	BEF-ER- SN2000-LFPC	2065701		
Device protec	Device protection (mechanical)				
	Coaxial tube for LFP with process connection G $^3$ 4, process connection of coaxial tube G $^3$ 4, material 1.4571/316TI, for probe length 200 mm	LFPCT-0200G1	2068141		
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316TI, for probe length 300 mm $$	LFPCT-0300G1	2068142		

	Brief description	Туре	Part no.
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316Tl$ , for probe length $400 \text{ mm}$	LFPCT-0400G1	2068143
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316Tl$ , for probe length $500~mm$	LFPCT-0500G1	2068144
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316TI$ , for probe length $600~\text{mm}$	LFPCT-0600G1	2068145
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316Tl$ , for probe length $700 \text{ mm}$	LFPCT-0700G1	2068146
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coax probe G $3/4$ , material $1.4571/316TI$ , for probe length $800~\text{mm}$	LFPCT-0800G1	2068147
	Coaxial probe for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316TI, for probe length 900 mm	LFPCT-0900G1	2067507
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316T$ I, for probe length $1000~\text{mm}$	LFPCT-1000G1	2065702
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316Tl$ , for probe length $1100 \ mm$	LFPCT-1100G1	2068148
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316Tl, for probe length 1200 mm	LFPCT-1200G1	2068149
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316Tl, for probe length 1300 mm	LFPCT-1300G1	2068150
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316Tl, for probe length 1400 mm	LFPCT-1400G1	2068151
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316Tl, for probe length 1500 mm	LFPCT-1500G1	2068152
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316T$ I, for probe length $1600 \text{ mm}$	LFPCT-1600G1	2068153
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316T$ I, for probe length $1700 \text{ mm}$	LFPCT-1700G1	2068154
	Coaxial tube for LFP with process connection G $3/4$ , process connection of coaxial tube G $3/4$ , material $1.4571/316T$ I, for probe length $1800 \text{ mm}$	LFPCT-1800G1	2068155
	Coaxial tube for LFP with process connection G 3/4, process connection of coax probe G 3/4, material 1.4571/316Tl, for probe length 1900 mm	LFPCT-1900G1	2068156
	Coaxial tube for LFP with process connection G 3/4, process connection of coaxial tube G 3/4, material 1.4571/316Tl, for probe length 2000 mm	LFPCT-2000G1	2065703
langes		'	
	Process connection adapter G ¾ to G1	BEF-HA- G1BSP1-LFP1	2067603
	Weld-in flange G 3/4"	BEF-FL- GEWG34-LFP1	2082150
ounting bra	ckets and plates		
	Mounting bracket, stainless steel 1.4301 (AISI 304), mounting hardware included	BEF-FL-304LFP-HLDR	2077391

# LFP0450-A5NMC | LFP Cubic

LEVEL SENSORS

	Brief description	Туре	Part no.
Others			
· Po	<ul> <li>Connection type head A: Female connector, M12, 8-pin, straight, A-coded</li> <li>Connection type head B: Flying leads</li> <li>Signal type: Sensor/actuator cable</li> <li>Cable: 2 m, 8-wire, PVC</li> <li>Description: Sensor/actuator cable, shielded</li> <li>Application: Zones with chemicals</li> </ul>	YF2A28- 020VA6XLEAX	2096243

# Recommended services

Additional services → www.sick.com/LFP\_Cubic

	Туре	Part no.
Function Block Factory		
<ul> <li>Description: The Function Block Factory supports common programmable logic controllers (PLCs) from various manufacturers, such as Siemens, Beckhoff, Rockwell Automation and B&amp;R. More information on the FBF can be found <a href="https://fbf.cloud.sick.com" target="_blank">here</a>.</li> <li>Note: You can configure your function block at <a href="https://fbf.cloud.sick.com" target="_blank">Function Block Factory.</a> As a login please use your SICK ID.</li> </ul>	Function Block Factory	On request

# SICK AT A GLANCE

SICK is one of the leading manufacturers of intelligent sensors and sensor solutions for industrial applications. A unique range of products and services creates the perfect basis for controlling processes securely and efficiently, protecting individuals from accidents and preventing damage to the environment.

We have extensive experience in a wide range of industries and understand their processes and requirements. With intelligent sensors, we can deliver exactly what our customers need. In application centers in Europe, Asia and North America, system solutions are tested and optimized in accordance with customer specifications. All this makes us a reliable supplier and development partner.

Comprehensive services complete our offering: SICK LifeTime Services provide support throughout the machine life cycle and ensure safety and productivity.

For us, that is "Sensor Intelligence."

# **WORLDWIDE PRESENCE:**

Contacts and other locations -www.sick.com

